

INSTALLATION INSTRUCTIONS

RF 20 ROOM SENSOR

1. Open housing of the room sensor by pressing the snap-on locks and remove housing cover.

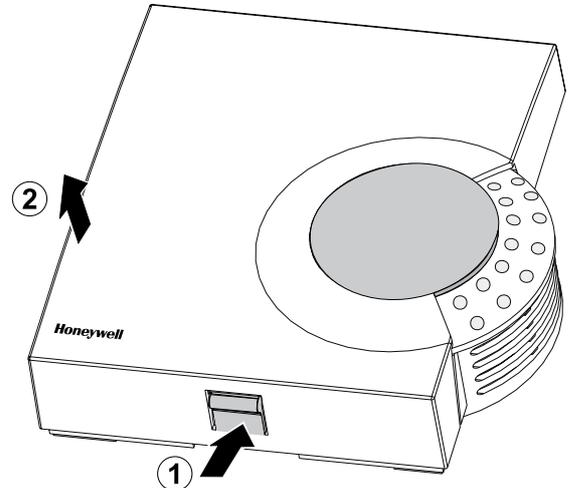


Figure 1: Removing housing cover

2. Screw room sensor to the flush distribution box.

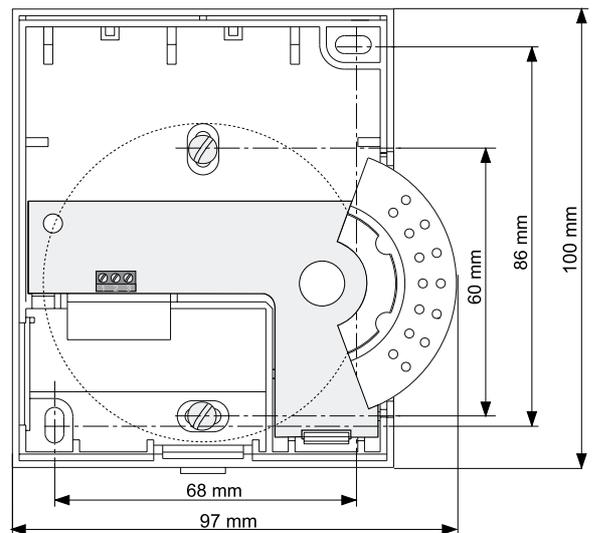


Figure 2: Installation onto flush distribution box

3. Connect cable coming from controller.

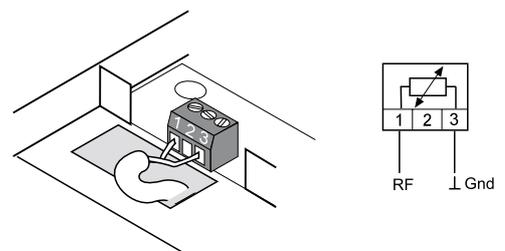


Figure 3: Terminals

Connection to terminals:

- 1 = Room temperature sensor (1 is left)
- 2 = not used
- 3 = GND

- Return cover to housing by placing top edge against back plate and snap lower part of cover onto housing.

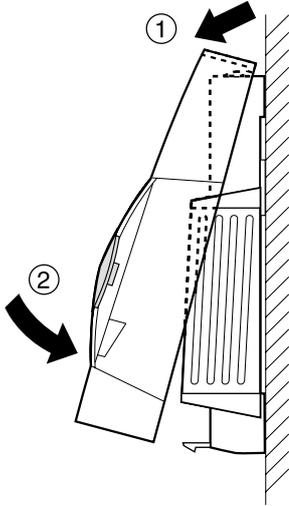


Figure 4: Replacing of housing cover