**SIEMENS** 





# **Electrical Actuators**

for small valves VVP47..., VXP47..., VMP47...

SSP31... SSP81... SSP61...

SSP31... operating voltage AC 230 V

• SSP81... operating voltage AC 24 V

SSP61... operating voltage AC / DC 24 V

Nominal force 160 N

Automatic identification of valve stroke

Direct mounting with coupling nut, no tools required

. Basic types complete with plug-in connecting cable, length 1.5 m

· Optional cable types

Cable length 1.5 m, 2.5 m and 4.5 m

Halogen-free cables

2.5 m cables with Batigyr connector

Manual override and position indication

• Parallel connection of multiple actuators possible

Use

For operation of Siemens valves of the V...P47... series for water-side control of hot and cooling water in heating, ventilation and air conditioning systems. In conjunction with the AL100 adapter, the actuators are also suitable for use with the 2W..., 3W... and 4W... valves

3-position control signal

3-position control signal

DC 0...10 V control signal

Type reference	Operating voltage	Run time at 50 Hz	Control signal	Connecting cable
SSP31	AC 230 V	150 s	3-position	1.5 m
SSP31/00 1)	AC 230 V			no cable
SSP81	AC 24 V			1.5 m
SSP81/00 1)				no cable
SSP81.04				1.5 m
SSP81.04/00 1)				no cable
SSP61		34 s	DC 010 V	1.5 m
SSP61/00 1)	AC / DC 24 V		DC 010 V	no cable
SSP61P			DC 010 V 2)	1.5 m

<sup>1)</sup> Available cable lengths or terminal block connectors (refer to «Accessories», page 3)

SSP81..., SSP61... are UL and cUL approved.

#### **Accessories**

Type reference	Description	Operating voltage	Control signal	
ASY3L15	Connecting cable 1.5 m			
ASY3L25	Connecting cable 2.5 m	AC 230 V		
ASY3L45	Connecting cable 4.5 m		İ	
ASY8L15	Connecting cable 1.5 m			
ASY8L25	Connecting cable 2.5 m		3-position	
ASY8L25B	Connecting cable 2.5 m with Batigyr connector	AC 24 V		
ASY8L45	Connecting cable 4.5 m			
ASY8L45HF	Connecting cable 4.5 m, halogen-free, VDE 0207-24			
ASY6L15	Connecting cable 1.5 m		DC 010 V	
ASY6L25	Connecting cable 2.5 m			
ASY6L45	Connecting cable 4.5 m	AC / DC 24 V		
ASY6L45HF	Connecting cable 4.5 m, halogen-free, VDE 0207-24			
ASY98	Retaining screw for terminal block connectors			
ASY99	Terminal block connector for 3-position actuators SSP81 /00			
ASY100	Terminal block connector for DC 010 V modulating actuators SSP61/00			
AL100	Adapter for retrofitting the actuators to 2W, 3W and 4W valves			

#### Ordering

When ordering, please give quantity, product name and type reference.

Example:

2 actuators without cable SSP81/00 and

2 terminal block connectors ASY99

Delivery

The valves, actuators and accessories are packed and supplied individually.

## **Equipment combinations**

Direct mounting

With AL100 adapter for retrofitting

Type reference	Valve type	<b>k<sub>VS</sub></b> [m <sup>3</sup> /h]	PN class	Data sheet	
VVP47	2-port valves	0.254.0			
VXP47	3-port valves	0.254.0		N4847	
VMP47	3-port valves with T-bypass	0.252.5	PN16		
2WK	2-port valves	0.62.5	PINTO	N4846	
3W	3-port valves	0.64.0			
4W	3-port valves with T-bypass	0.62.5			


 $k_{vs}$  = nominal flow rate of cold water (5...30 °C) through the fully open valve (H<sub>100</sub>) at a differential pressure of 100 kPa (1 bar)

 $<sup>^{\</sup>rm 2)}$  Active stroke range DC 5...7.5 V (0...100 % stroke), replacement for AM1S...

# Valves from other manufacturers

To ensure trouble-free operation of third-party valves with the SSP... actuator, the valves must satisfy the following requirements:

- Threaded connections with coupling nut M30 x 1.5
- Nominal force F ≤ 160 N
- Dimension x (with valve fully open)
   x > 9.0 mm
- Dimension y (with valve fully closed)  $y \le 14.5 \text{ mm}$

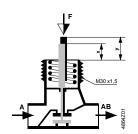

#### Function / mechanical design

When the actuator is driven by DC 0...10 V control voltage or by a 3-position signal, it produces a stroke which is transmitted to the valve stem.

The description of operation in this document applies to the valve versions which are fully closed when deenergized (NC).

# 3-position control signal

SSP31... / SSP81...

Voltage at Y1: Stem extends: Valve opens
 Voltage at Y2: Stem retracts: Valve closes
 No voltage at Y1 or Y2: Actuator maintains its current position

# DC 0...10 V control signal SSP61...

- The valve opens / closes in proportion to the control signal at Y.
- At DC 0 V, the valve V...P47... is fully closed (A  $\rightarrow$  AB).
- When power supply is removed, the actuator maintains its current position.

#### Features and benefits

- Position indication
- · Locking-proof, maintenance-free gear train
- Manual override with hexagonal socket wrench 3 mm
- Reduced power consumption in the holding positions
- Load-dependent switch-off in the event of overload and in stroke end positions
- Parallel operation of 6 SSP31..., 24 SSP81... and 10 SSP61... possible, provided the controllers' output is sufficient
- Terminal block connectors for customer made cables available
  - (only for use with AC 24 V and AC / DC 24 V actuators)
- Connecting cables with AC 24 V and AC 230 V connectors cannot be mixed up
- Halogen-free cable available




#### Accessories

### Retaining screw ASY98



Type ASY98 to secure the cable connector.

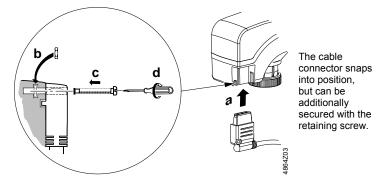

#### Terminal block connectors ASY99

ASY99 ASY100



For special cable lengths of the AC / DC 24 V actuators.

- ASY99 for 3-position actuators SSP81/00 and SSP81.04/00
- ASY100 for DC 0...10 V modulating actuators SSP61/00

The terminal block connectors are supplied complete with Mounting Instructions (74 319 0385 0).

#### Adapter AL100



AL100 for retrofitting SSP61... actuators to the 2W..., 3W... and 4W... valves.

The adapter is supplied complete with Mounting Instructions (74 319 0302 0).

#### **Notes**

#### **Engineering**

The actuators must be electrically connected in accordance with local regulations (refer to «Connection diagrams»), page 7.

#### △ Caution

Regulations and requirements to ensure the safety of people and property must be observed at all times!

The permissible temperatures (refer to «Technical data», page 6) must be observed. The connecting cable of the actuator may come into contact with the hot valve body, provided the temperature of the valve body does not exceed 80 °C.

#### Mounting

Valves V..P47...

The Mounting Instructions 74 319 0497 0 are enclosed in the product packaging.

Assembly is made with the coupling nut; no tools or adjustments are required. The actuator without operating voltage must be fitted in position 0 (also refer to «Manual override», page 5):

- Position the actuator and tighten the coupling nut manually
- **△** Caution
- Do not use any tools such as wrenches
- · Avoid lateral pressure or (cable) tension on the mounted actuator!


In the case of actuators without connecting cable (SSP.../00), the separately ordered terminal block connector and connecting cable must be fitted.

#### Valves

2W... / 3W... / 4W...

Mounting adapter AL100 is required

#### Orientation

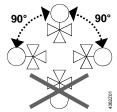

#### Commissioning

When commissioning the system, check wiring and the functions of the actuator.


- Actuator stem extends (from position 0 to 1): Valve opens
- Actuator stem retracts (from position 1 to 0): Valve closes

#### **Self-calibration**

 $\triangle$  Caution

During commissioning and whenever the operating voltage is switched on, the SSP61... runs a self-calibration routine. (Valve stroke  $0 \rightarrow Max$ . stroke  $\rightarrow Setpoint$ ).

Never intervene manually in this process.

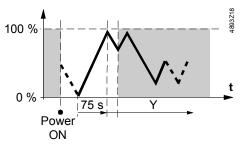

Note: Correct calibration is only possible with valve.

The second or third attempt at calibration occurs automatically after an 8-minute delay.

After three failed calibration attempts the actuator stem remains in the extended position and the V...P47... valves are opened.


#### Operation


A 3 mm hexagonal socket wrench can be used to move the actuator to any position between 0 and 1. However, if a control signal from the controller is present, then this takes priority in determining the position.


Note

To retain the manually set position, unplug the connecting cable or switch off the operating voltage and the control signal.

#### Manual override

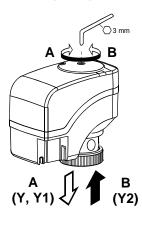

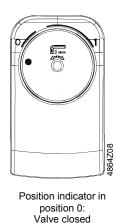

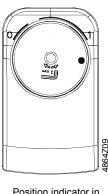

Position indicator in position 1:

Valve open

#### Maintenance

The actuators are maintenance-free.

When carrying out service work on the plant, following must be noted:



- Turn power off (e.g. remove the plug)
- If necessary, disconnect electrical connections from the terminals
- The actuator must be commissioned only with a correctly mounted valve in place!

Repairs

SSP... actuators cannot be repaired; the complete unit must be replaced.





The device must not be disposed of together with domestic waste. This applies in particular to the PCB.

Legislation may demand special handling of certain components, or it may be sensible from an ecological point of view.


Current local legislation must be observed.


#### Warranty

The technical data given for these applications is valid only when the actuators are used with the Siemens valves listed under «Equipment combinations», page 2.

The use of the SSP... actuators in conjunction with third-party valves invalidates any warranty offered by Siemens Switzerland Ltd / HVAC Products.

			SSP31	SSP81	SSP61
Power supply		Operating voltage	AC 230 V	AC 24 V	AC 24 V or DC 24 V
****		Voltage tolerance	± 15 %	± 20 %	± 20 % ± 25 %
		Rated frequency	50 / 60 Hz		60 Hz
		Max. power consumption	6 VA	0.8 VA	2.5 VA
lack		Fuse for incoming cable (fast)	2 A, quickblo		ickblow
Control		Control signal	3-po:	sition	DC 010 V 1)
		Active stroke range for DC 010 V			SSP61: DC 0.39.7 V <sup>2</sup> SSP61P: DC 57.5 V <sup>3</sup>
		Input impedance for DC 010 V			> 100 kOhm
		Parallel operation	max. 6	max. 24	max. 10
		(number of actuators) 4)			
Functional data		Run time for 2.5 mm stroke at 50 Hz	150 s 34 s		34 s
		SSP81.04		43 s	
		Nominal stroke	2.5 mm (max. 5.5		ax. 5.5 mm)
		Nominal force	160 N		•
		Permissible temperature of medium in the connected valve:	1 110°C		110°C
Electrical connections		Connecting cable of basic types	cting cable of basic types 1.5 m 3-core to EN 60320 / IEC 6		I 60320 / IEC 60227
Standards		Meets requirements for CE marking: EMC directive	2004/108/EC		
		Immunity	EN 61000-6-		
		Low voltage directive		3 Resident	ial
		·	2006/95/EC EN 60730-1		
		Electrical safety			III
		Protection class to EN 60730	EN 60730, C	lace 2	III
		Contamination level	EN 60730, C	iass z	
		Housing protection			
		Upright to horizontal	IP40 to EN 6		
		UL approbation		UL 873	
		cUL approbation		C22.2 No. 2	24
		Environmental compatibility	ISO 14001 (Environment) ISO 9001 (Quality)		
			SN 36350 (Environmentally compatible products) RL 2002/95/EG (RoHS)		
Dimensions / weight		Dimensions	refer to «Dimensions», page 8		
		Coupling thread to valve	coupling nut M30 x 1.5 mm		
		Weight	0.35 kg		
Housing colors		Base	RAL 7035 light gray		5 light gray
Housing colors			RAL 9003 signal white		

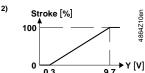

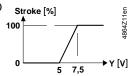


<sup>4)</sup> Provided the controllers' output is sufficient

## **General ambient conditions**

<b>i</b>	Operation	Transport	Storage
	EN 60721-3-3	EN 60721-3-2	EN 60721-3-1
Environmental conditions	Class 3K3	Class 2K3	Class 1K3
Temperature	+1+50 °C	−25+70 °C	−5+50 °C
Humidity	585 % r.h.	< 95 % r.h.	595 % r.h.

 $<sup>^{5)}\,</sup>$  Transformer 160 VA (e.g. Siemens 4AM3842-4TN00-0EA0) for AC 24 V actuators

#### Connecting cable

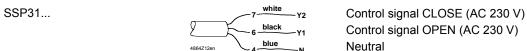

4864Z12er

orange SSP81... Control signal CLOSE (AC 24 V) Control signal OPEN (AC 24 V) red System potential (AC 24 V)

grey SSP61... Control signal DC 0 ... 10 V black System neutral (- DC 24 V) System potential AC 24 V (+ DC 24 V) red

#### **Connection terminals**

**Y2** \$884 S12 ASY99 Control signal CLOSE **Y1** for SSP81... Control signal OPEN G System potential AC 24 V **G0**  $^{57}_{72}$ **ASY100** System neutral Υ

Control signal DC 0 ... 10 V

System potential AC / DC 24 V

# **Connection diagrams**

for SSP61

Ν Controller |||2AF Υ Actuator

> L System potential AC 230 V Ν System neutral


Y1, Y2 Control signal OPEN, CLOSE

Q1, Q2 Controller contacts

SSP31... (L) Q1 'Q2 (N) (Y1) (Y2) AC 230 V Y2 Y1

G

SSP81...

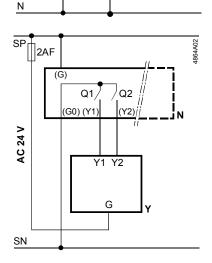


Ν Controller Υ Actuator

SP, G System potential AC 24 V

SN, G0 System neutral

Y1, Y2 Control signal OPEN, CLOSE

Q1, Q2 Controller contacts SSP61...

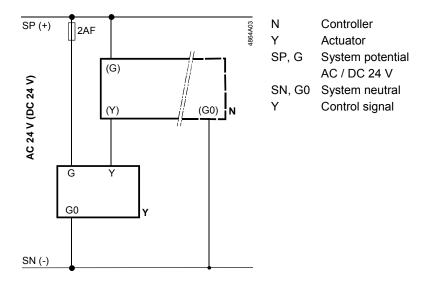

#### **Dimensions**

#### All dimensions in mm

